 


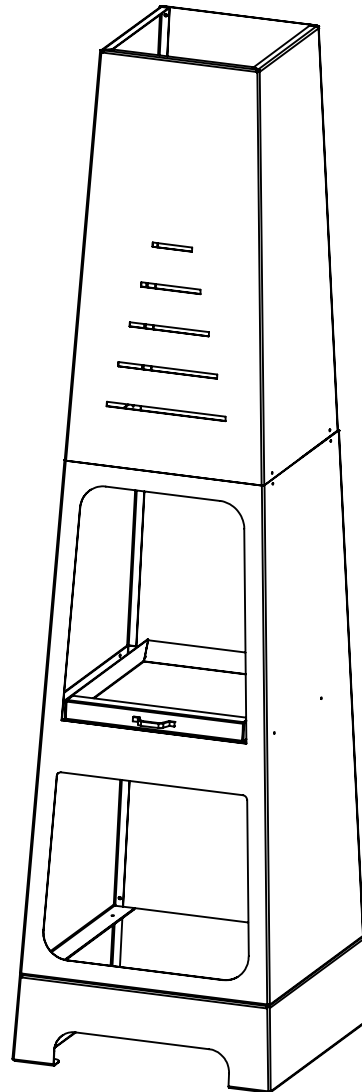


STAND FIREWOOD

OPERATING INSTRUCTIONS

Contents

1. All models
2. Technical details
3. Equipment diagram
4. Install steps
5. Maintenance / Cleaning
6. Part number

 1- All models of Stand Fire wood.

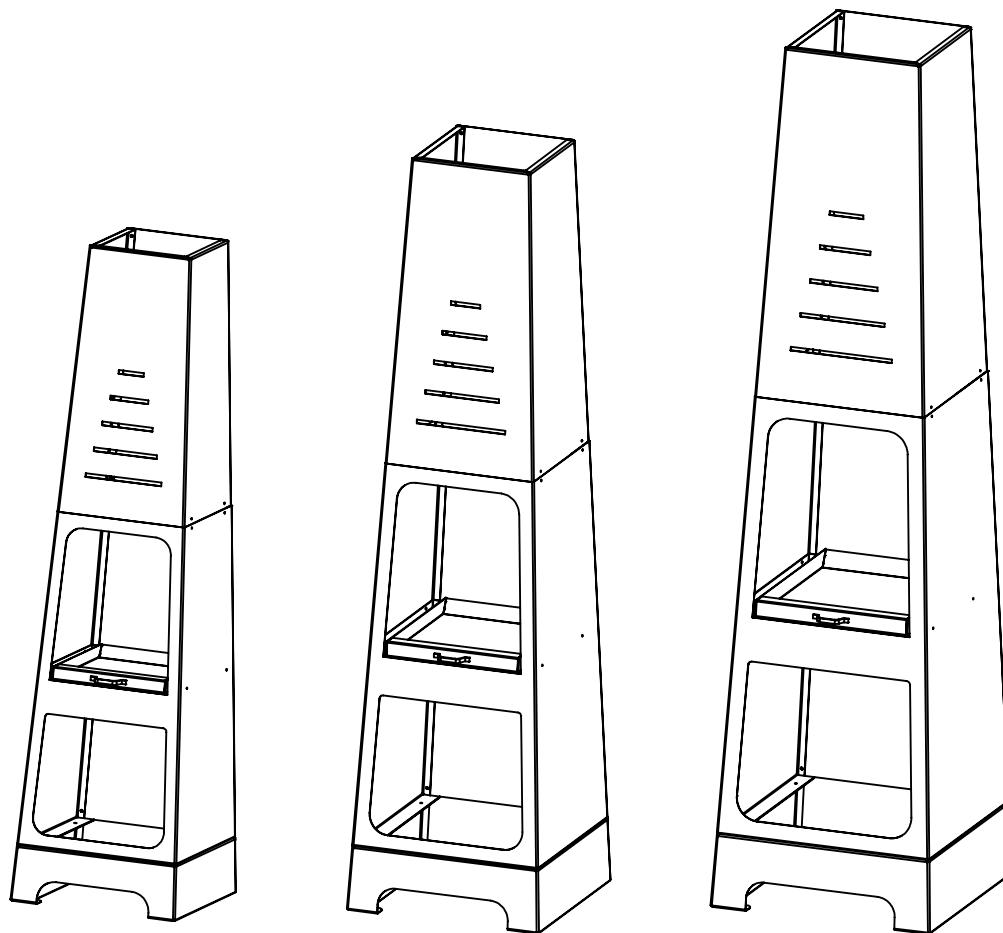


FW.S-S


FW.S-M

FW.S-L

 1-2 Identification Codes

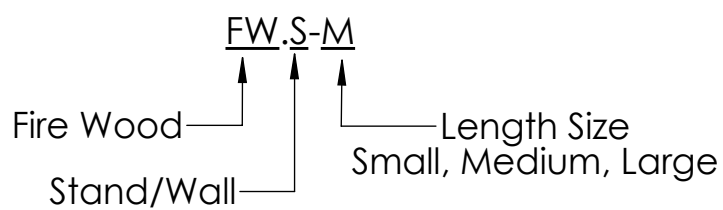

2- Technical details

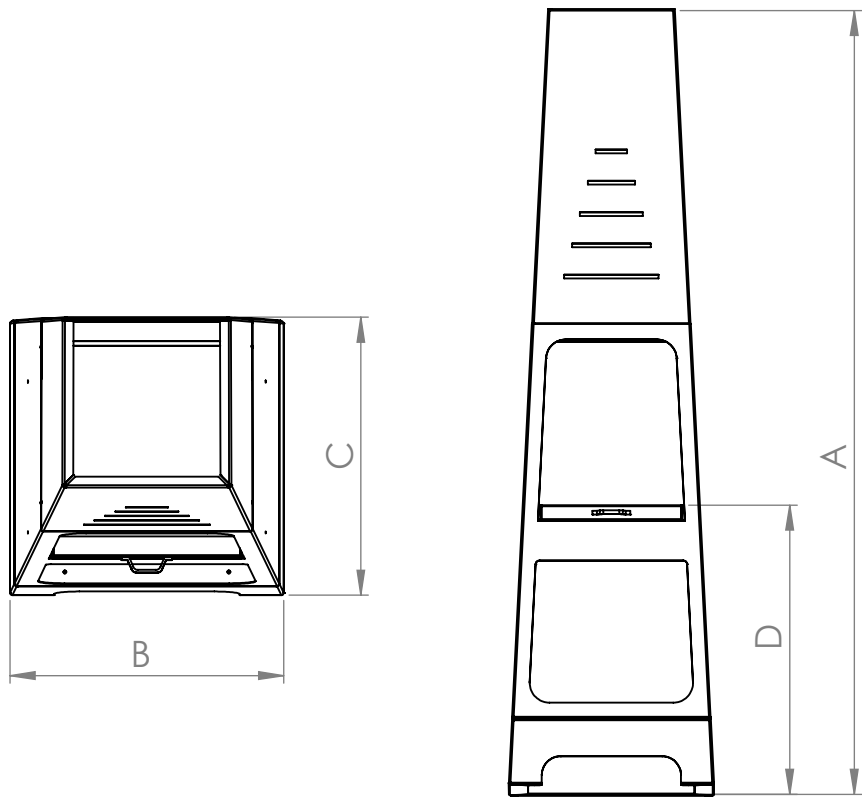 

STAND FIREWOOD				
TYPE		FW.S		
		Small	Medium	Large
Dimensions (mm)	A	1250	1600	1900
	B	330	400	500
	C	330	400	500
	D	500	600	700
Material		Iron with electrostatic coating		
Weight (kg)		16	25	36
Order code		FW-S.S	FW-S.M	FW-S.L